

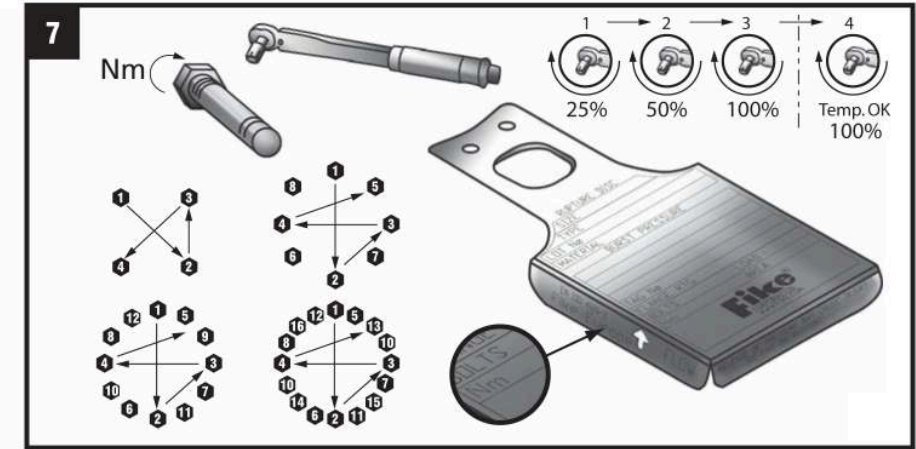
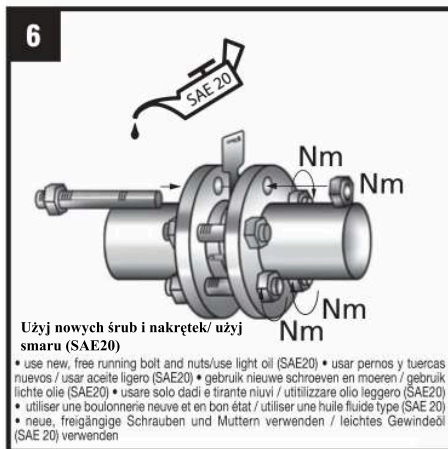
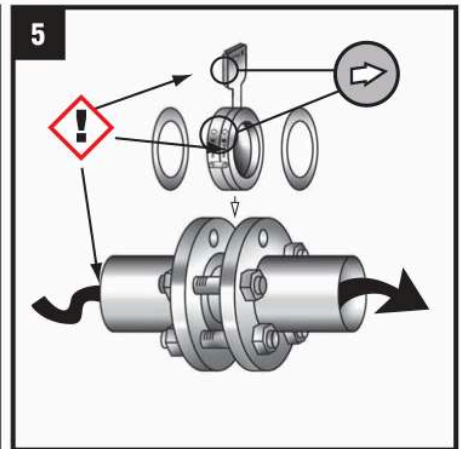
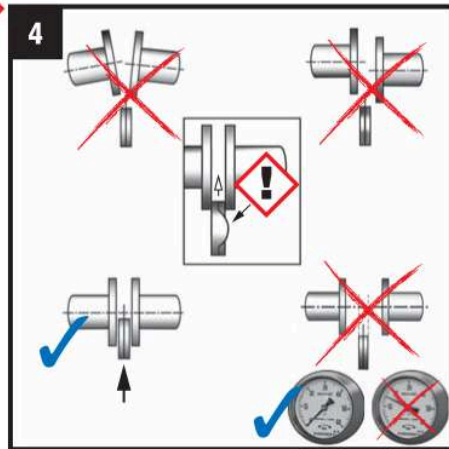


AXIUS HO/HOV
 Poly-SD P Series
 SCR D SRX
 SCR D-FSR SRL

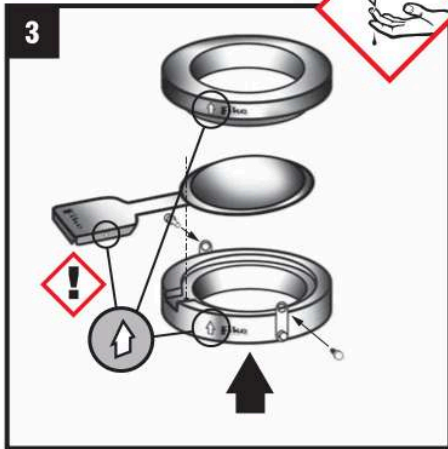

INSTALL - INSTALLARE - INSTALLEREN - INSTALLER - INSTALAR - INSTALACJA

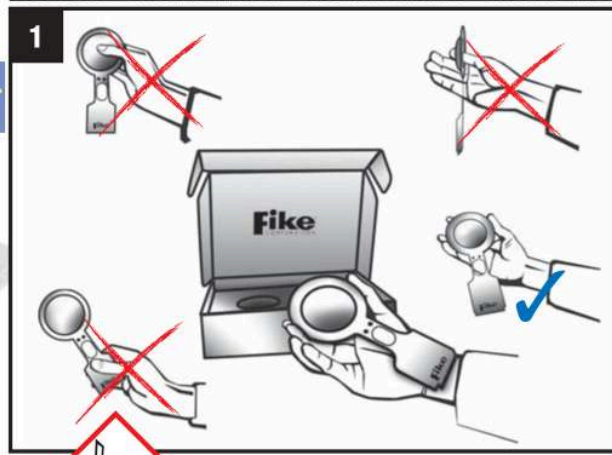

REPLACE - SOSTITUIRE - VERVANGEN - REPLACER - CAMBIAR - ERSETZEN Wymiana

